

Wireless Keyboard

IC-BK06

User Manual


Package Contents

- 1 x Wireless Keyboard
- 1 x USB-C Charging Cable 1 x Stand Holder for Smartphone and Tablet
- 1 x User Manual

Specifications

Connection Type	Bluetooth 5.1	
Connected Devices	Up to 3	
Compatibility	Win, Mac, Chrome, Android, iOS	
Power	USB-C Charge	
Lithium Battery Capacity	110 mAh	
Uninterrupted Working Time	40 hours	
Standby Time	30 days	
Charging Time	2 hours	
Lithium Battery Life	3 years	
Key Life	3 million clicks	
Unfolding Dimensions	12.91*4.01*0.23 inch	
Folding Dimensions	6.22*4.01*0.51 inch	
Material	PU case	
Weight	About 176g	
Frequency band	2402MHz-2480MHz	
Maximum transmission power	0 dBm	

Indicator Lights Description

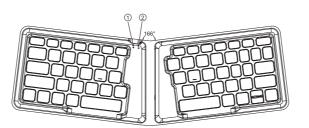

① Caps Lock Indicator:

Press "caps lock" key to switch between uppercase and lowercase. When the indicator is on, it is uppercase.

Bluetooth Indicator:

Press "fn" + "Z" keys to pair, and the indicator will keep flashing blue.

Unfold the keyboard to power on; it will light in green for 3 seconds.

Charging Indicator:

Stay in red when charging.

Battery Check Indicator:

Press "fn" + "F12" keys to check the battery, and each flash represents 25% battery reminding, 4 flashes in total.

.2.

Pairing Steps

a. How to pair with Bluetooth devices?

Pairing with the 1st device

Step 1. Unfold the keyboard to power on.

Step 2. Press "fn" + "Q" keys to choose Bluetooth Channel 1.

Step 3. Press "fn" + "Z" keys to Bluetooth Pairing mode, and the indicator will keep flashing blue.

Step 4. On your device, find the name "iClever IC-BK06 Keyboard" and click to connect it.

Pairing with the 2nd device

Step 1. Press "fn" + "W" keys to choose Bluetooth Channel 2.

Step 2. Press "fn" + "Z" keys to Bluetooth Pairing mode, and the indicator will keep flashing blue.

Step 3. On your device, find the name "iClever IC-BK06 Keyboard" and

Pairing with the 3rd device

Step 1. Press "fn" + "E" keys to choose Bluetooth Channel 3.

Step 2. Press "fn" + "Z" keys to Bluetooth Pairing mode, and the indicator will keep flashing blue.

Step 3. On your device, find the name "iClever IC-BK06 Keyboard" and click to connect it

Connect with iClever Keyboard in different system:

► For Windows 10:

Click Win > Setting > Devices > Bluetooth & other devices > Add Bluetooth or other device > Bluetooth > Click "iClever IC-BK06 Keyboard" to connect. ► For iPad/iPhone:

Click Setting > Bluetooth > Click "iClever IC-BK06 Keyboard" to connect. ► For MacBook/iMac:

Click System Preferences > Bluetooth > Click "iClever IC-BK06 Keyboard" to connect

.3.

—the Bluetooth pairing name may appear as "Keyboard" in Windows 10. -auto re-connect function: the keyboard will connect with the

last-used device automatically.

-do not connect it via a Bluetooth adapter

B. How to switch among connected devices?

Press "fn" + "Q/W/E" keys to switch among connected devices

C. How to re-pair a channel that has already connected?

Step 1. Press "fn" + "Q/W/E" keys to choose the Bluetooth channel that vou wan to re-pair.

Step 2. Press "fn" + "Z" keys to Bluetooth mode AGAIN to re-pair.

Keys and Function

The table below describes special key combinations for different operating

Key	iOS	Android	Windows	Windows
icon	[Press Fn +	[Press Fn +	[Press Fn +	[Press Fn + Shift
	(F1-F12) keys]	(F1-F12) keys]	(F1-F12) keys]	+ (F1-F12) keys]
esc esc	N/A	Esc	Esc	N/A
! <u>^</u>	Home	Home	Web browser	F1
2 F2	Brightness -	Brightness -	Brightness - (Windows 10)	F2
# * 3 F3	Brightness +	Brightness +	Brightness + (Windows 10)	F3
\$ Q 4 F4	Search for	Search for	Search for	F4
% I44 5 F5	Previous track	Previous track	Previous track	F5
^ >1 6 F6	Play/pause	Play/pause	Play/pause	F6
& ►►I 7 F7	Next track	Next track	Next track	F7
* 4- 8 F8	Volume -	Volume -	Volume -	F8
(4+ 9 F9	Volume +	Volume +	Volume +	F9
) 🖺 0 F10	Battery check	Battery check	Battery check	F10
- F11	Screenshot	Screenshot	Screenshot	F11
+ a = F12	Screen lock	Screen lock	N/A	F12

Special Keys	Descriptions
Q @1	Switch function: press "fn"+ this key to switch to Bluetooth channel 1.
W ⊗2	Switch function: press "fn"+ this key to switch to Bluetooth channel 2.
E 63	Switch function: press "fn"+ this key to switch to Bluetooth channel 3.
Z	Pairing function: press "fn"+ this key to Bluetooth pairing mode.
fn	The "fn" key is used in combination with other keys to access special features.
ctrl	It work as keyboard display when your system is iOS. NOTE: works for iOS only.
win alt ~=	This key works as "win" when your system is Windows. This key works as "option" when your system is iOS/Mac.
alt cmd ⋈	This key works as "alt" when your system is Windows/Android. This key works as "command" when your system is iOS/Mac.
Point	Press "fn" + to work as page up. Press "fn" + to work as page down. Press "fn" + to work as home. Press "fn" + to work as end.

System Requirements

- --Windows 8 or late PC/laptop/tablet. -- Android 6.0 or late smartphone/tablet
- --iOS 9.0 or late iPhone/iPad
- --Mac OS X 10.8 or later Mac

NOTE: Do not compatible with Mac mini. Mac studio. XBOX. Samsung Smart TV, Nokia Phones and Bluetooth adapter.

Energy-saving Sleep Mode

The keyboard will enter sleep mode after being idle for 30 minutes. To activate it, by pressing any key and wait for 3 seconds

Charging Instruction

If your keyboard stop working, please try to charge the keyboard by our included charging cable PC/laptop port. If you prefer to connect charging cable with adapter, before to use, please check your adapter voltage is not higher than 5V.

- --- Keyboard output: DC 5V/200mA; USB charger is not included. --- In charging process, the indicator light will light up red when
- charging. Generally, it takes about 2 hours to get fully charged.

Tips

- Keep away from sharp objects.
 Keep away from microwave radiation source or the similar source. Do not stack by heavy objects.
- . Do not impact or bend the keyboard.
- Keep away from oil, chemical or other organic solvent. · Power off the keyboard if not in use.

FAQ

Q: Keyboard stop working / fail to connect.

- 1. Charge the keyboard for 2 hours.
- 2. Verify the product is connected directly to the computer and not to
- 3. Make sure that your iClever device and computer are within close proximity of each other.
- 4. Try moving away at least 8 inches (20 cm) from metal and other sources of wireless signal.

 5. Delete all the Bluetooth connection records.
- (For example, for iPad, click "Settings" > "Bluetooth" > under "MY DEVICE" to delete all the Bluetooth connection records)
 6. On your device, turn off the Bluetooth and turn it on again to Refresh.
- (For example, for iPad, click "Settings" > "Bluetooth" > if the on-screen switch beside Bluetooth currently shows as ON, tap it twice to refresh it) 7. Connect it again.

Q: Delay when typing.

The most common cause of typing lag are lack of memory, signal interference and low battery. Please try as below to check:

- 1. Restart your Bluetooth device.
- 2. Charge the keyboard for 2 hours.
- 3. Make sure that your iClever device and computer are within close proximity of each other.
- 4. Try moving away at least 8 inches from:
- Any device that could emit wireless waves: Microwave, cordless phone baby monitor, wireless speaker, garage door opener. WiFi router — Computer power supplies, Metal or metal wiring in the wall
- 5. Do not use your wireless keyboard on metal surfaces.
- 6. Check if there are any updates running in the background.
- 7. Check your computer memory, insufficient memory may cause the delay. 8. Try on a different APP/device to connect or email us.

FCC Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- -- Reorient or relocate the receiving antenna.
- -- Increase the separation between the equipment and receiver.
- -- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- -- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

The product comes with a 12-month warranty, if you have any questions, please feel free to contact us by support@iclever.com.