iclever

Wireless Keyboard

IC-BK06 Mate

User Manual
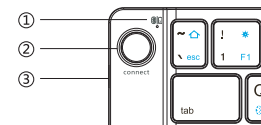

Package Contents

1 x Foldable Keyboard
1 x Charging Cable
1 x Stand Holder for Smartphone
1 x User Manual

Specifications

Bluetooth Specification	Bluetooth 5.1
Dimensions (open)	291*100*7mm
Connection Devices	up to 3
Charge Time	2 hours
Uninterrupted Work Time	about 60 hours
Stand-by Time	90 days
Key Life	3 million clicks

•Frequency Band: 2402MHz~2480MHz
•Maximum Transmission Power: 0 dBm

Indicator Lights Description

① Indicator : stay in red when charging; flash blue when in pairing mode; flash red quickly when in low power.
② Connect button : click this button to Bluetooth pairing mode, and the indicator will keep flashing.
③ Charging port : for charging.

Keys and Function

The table below describes special key combinations for different operating systems.

Function Keys	iOS	Android	Windows 10	Mac OS	Windows or Mac OS
Way to use	Press fn +	Press fn +	Press fn +	Press fn +	Press fn + shift +
	Home	Home or N/A	Web Browser	N/A	esc
	Brightness -	Brightness -	Brightness -	Brightness -	F1
	Brightness +	Brightness +	Brightness +	Brightness +	F2
	Search	Search or N/A	Search	Search	F3
	Previous Track	Previous Track	Previous Track	Previous Track	F4
	Play/Pause	Play/Pause	Play/Pause	Play/Pause	F5
	Next Track	Next Track	Next Track	Next Track	F6
	Mute	Mute	Mute	Mute	F7
	Volume -	Volume -	Volume -	Volume -	F8
	Volume +	Volume +	Volume +	Volume +	F9
	Battery Checking	Battery Checking	Battery Checking	Battery Checking	F10
	Print Screen	Print Screen or N/A	Print Screen	Print Screen	F11
	Lock Screen	Lock Screen or N/A	Lock Screen	N/A	F12
	Delete	Delete	Delete	Delete	N/A

Special Keys	Descriptions
	The fn key is used in combination with other keys to access special features.
Q	Press fn + this key to choose Bluetooth Channel 1.
W	Press fn + this key to choose Bluetooth Channel 2.
E	Press fn + this key to choose Bluetooth Channel 3.
○	Press "connect" button to Bluetooth pairing status.
	Press fn + this key to work as virtual keyboard. Note: this function works for iOS only.
	Press「Fn」+ to work as page up. Press「Fn」+ to work as page down. Press「Fn」+ to work as home. Press「Fn」+ to work as end.
	Press fn + this key to check the battery reminding. The Indicator flashes once for 25%, twice for 50%, 3 times for 75%, and 4 times for 100%.

Quick Start

Step 1: Unfold the keyboard to power on.

Step 2: Press "fn"+"Q" keys to choose Bluetooth Channel 1.

Step 3: Press button of "connect" to Bluetooth pairing mode;

Step 4: Find the name of "iClever IC-BK06 Mate Keyboard" and click to connect.

Pairing Instruction

A. How to pair with 3 devices?

Pairing with the 1st device
Step 1. Unfold the keyboard to turn on.
Step 2. Press "Fn"+"Q" keys simultaneously to choose Bluetooth channel 1.
Step 3. Press left button of "connect" to enter pairing mode; status indicator will flash blue slowly.
Step 4. On your device, find the Bluetooth name "iClever IC-BK06 Mate Keyboard" and click to connect it.

Pairing with the 2nd device
Step 1. Press "Fn"+"W" keys simultaneously to choose Bluetooth channel 2.
Step 2. Press button of "connect" to enter pairing mode; status indicator will flash blue slowly.
Step 3. On your device, find the Bluetooth name "iClever IC-BK06 Mate Keyboard" and click to connect it.

Pairing with the 3rd device
Step 1. Press "Fn"+"E" keys simultaneously to choose Bluetooth channel 3.
Step 2. Press button of "connect" to enter pairing mode; status indicator will flash blue slowly.
Step 3. On your device, find the Bluetooth name "iClever IC-BK06 Mate Keyboard" and click to connect it.

Notes:
1. Auto re-connect function: when you turn on the keyboard, it will connect with the last-used device automatically.
2. If the connection fails, please delete all the pairing records from your device; turn off your device Bluetooth function and turn it on again and then follow the above instructions again.

B.How to switch among 3 connected devices?

Press key of "fn"+ "Q/W/E" to switch among connected devices.

C.How to re-pair a channel that has already been connected? ：

Step 1. Press "Fn"+ "Q/W/E" keys simultaneously to choose Bluetooth channel 1/2/3.
Step 2. Press left button of "connect" again to enter pairing mode;
Step 3. On your device, find the Bluetooth name "iClever IC-BK06 Mate Keyboard" and click to connect it.

Keyboard Language Switching

iOS 9 or above: ctrl + space
Windows 10: command + Space or alt + shift / caps Lock
Android: ctrl + space / shift + space/ others
Note: the above way may not work in all android devices.

Important

As this is a multilingual keyboard, set the language of the device to your desired language before use.
For iOS devices only:
Settings > General > Keyboard > Keyboards > Add new keyboard > Select desired language
For Samsung Android devices only:
Settings > Controls > Language and input > Samsung Keyboard > Select input languages > Select desired language
For Android devices only:
Settings > Language & input > Physical Keyboard > Set up keyboard layouts > Select desired language
For Windows devices only:
Control Panel > Clock, Language and Region > Select desired language

---

Compatibility

＊ iOS/iPadOS 13.0 or late
＊ macOS 10.15 or later
＊ Windows 8 or later
＊ Android 6.0 or late
＊ **This keyboard is not compatible with Bluetooth Adapter, Samsung Smart TV, Mac mini, iPad mini 5, Xbox, and Nokia phones.**

Power Saving Mode

The keyboard will enter sleep mode after being idle for 10 minutes.
To activate it, press any key and wait for 3 seconds.

Charge the Keyboard

＊ Use the included USB cable for charging. Connect one end to a USB charger, and the other to the keyboard.
  (Output: DC 5V/80mA; USB charger is not included.)
＊ In charging, the power indicator will turn red. Generally, it takes about 2 hours for a full charge.

FAQ

Q: My keyboard fail to connect / stop working.

1. Charge the keyboard for 2 hours.
2. Make sure that your iClever device and computer are within close proximity of each other.
3. Try moving away at least 8 inches (20 cm) from metal and other sources of wireless signal.
4. Delete all the Bluetooth connection records.
(For example, for iPad, click "Settings" > "Bluetooth" > under "MY DEVICE" to delete all the Bluetooth connection records)
5. On your device, turn off the Bluetooth and turn it on again to Refresh.
(For example, for iPad, click "Settings" > "Bluetooth" > if the on-screen switch beside Bluetooth currently shows as ON, tap it twice to refresh it)
6. Connect it again or email us.

Q: Delay when typing, stop working, and frequently get disconnected.
1. Restart your Bluetooth device.
2. Charge the keyboard for 2 hours.
3. Make sure that your iClever device and computer are within close proximity of each other.
4. Try moving away at least 8 inches from:
---- Any device that could emit wireless waves: Microwave, cordless phone, baby monitor, wireless speaker, garage door opener, WiFi router
---- Computer power supplies, Metal or metal wiring in the wall
5. Do not use your wireless keyboard on metal surfaces.
6. Check if there are any updates running in the background.
7. Check your computer memory, insufficient memory may cause the delay.
8. Try on a different APP/device to connect or email us.

Q: Is this waterproof?
No, it is not waterproof.

Tips

Keep away from oil, chemical, liquid, and snacks.
Keep away from sharp objects.
Keep away from metal and other sources of wireless signal.

Contact

If you have any questions, please free to contact us by support@iclever.com.

FCC Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

-- Reorient or relocate the receiving antenna.
-- Increase the separation between the equipment and receiver.
-- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
-- Consult the dealer or an experienced radio/TV technician for help

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions (1)this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.